

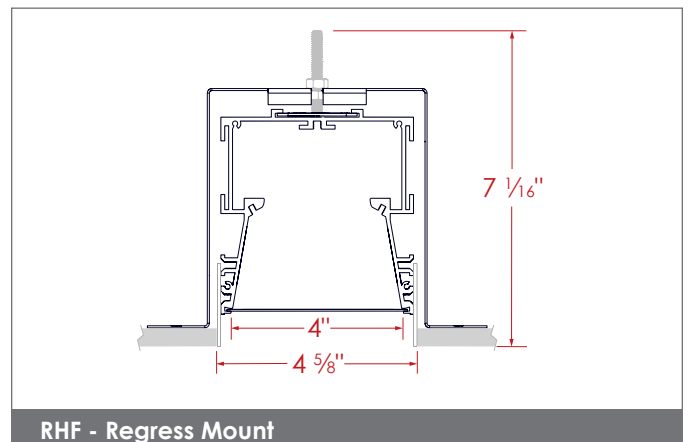
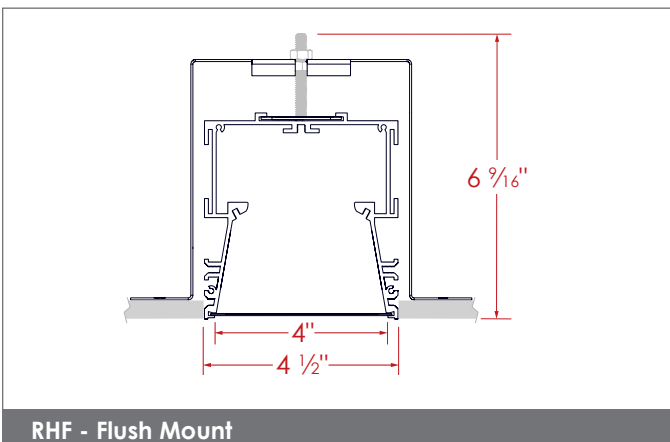
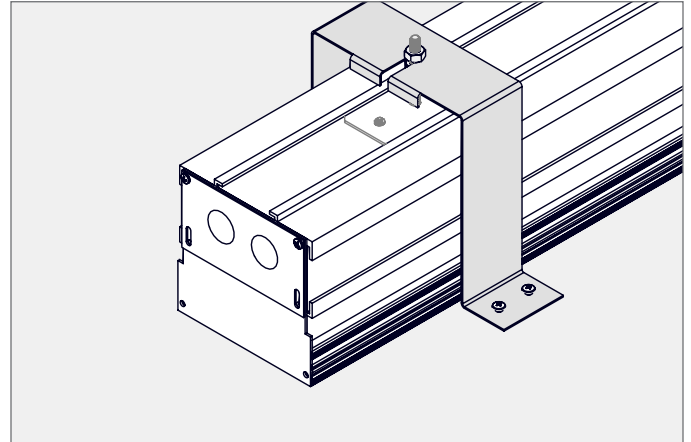


For complete installation instructions including wiring connections, wiring diagrams, joining sections, ControlRoll™ lens installation, and troubleshooting, refer to SP4R Installation Instructions for Trim & Trimless Mud-In.

Luminaire Overview

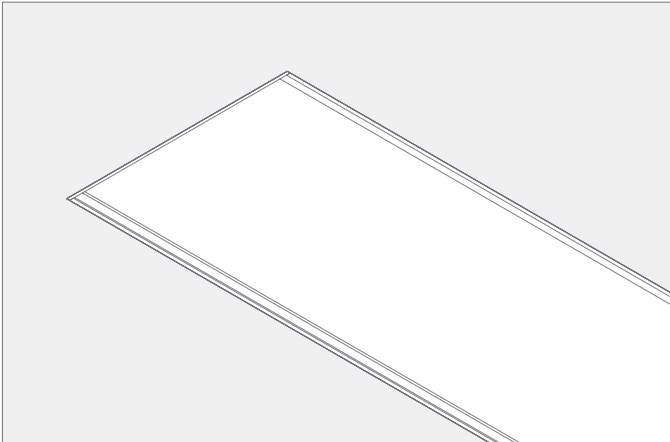

Additional Included Parts

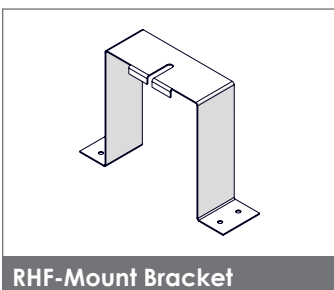

*Brackets come in 3 sizes for varying ceiling panel thickness. Panel thickness must be specified.


Parts (by others)

- ▣ Screws for mounting to ceiling panel (screws must be appropriate for panel material and thickness)


Tools Required

- ▣ See installation instructions for trim & trimless mud-in


Installation: Recessed Hidden Flange

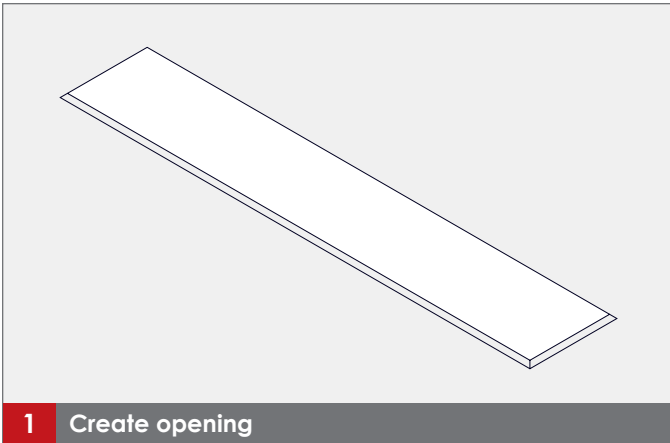


Create opening of specified length and width for fixture. Flush mount fixtures require 4.5" opening. Regress fixtures require 4.625" opening. Opening must be straight with parallel sides. For vertical installations, ???.

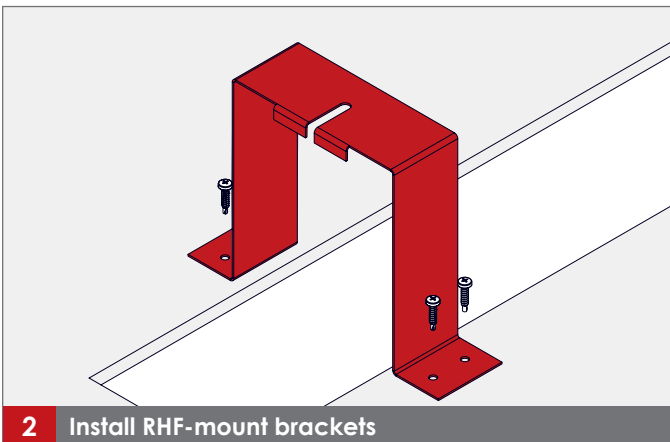


Fasten mounting brackets to top of ceiling material with 4x screws (not-included). Brackets should be placed approximately 8 in. from fixture ends with slots facing towards ends of fixture. For sections 6 ft. and longer, install a third bracket near the mid-point length of the fixture.

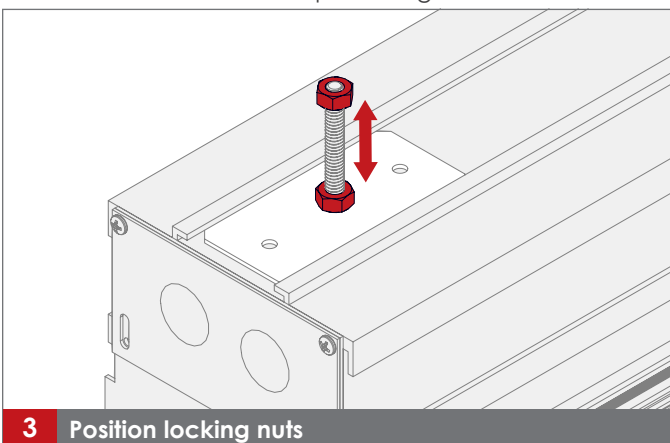


Position locking nuts on T-Slider Brackets as shown in image.

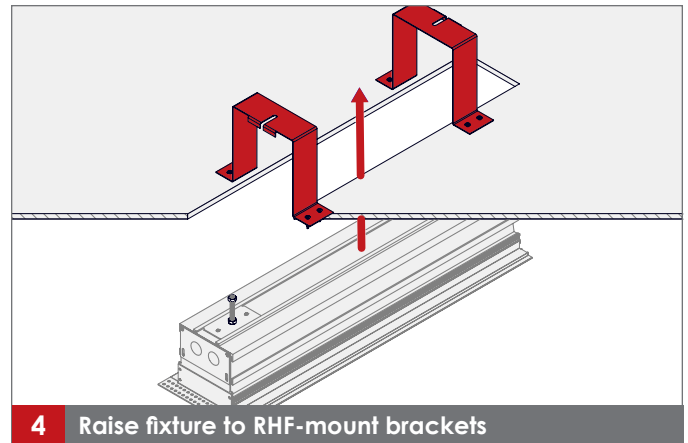

Raise fixture to RHF-Mount Brackets. Ensure sliders are properly oriented to outside of brackets.

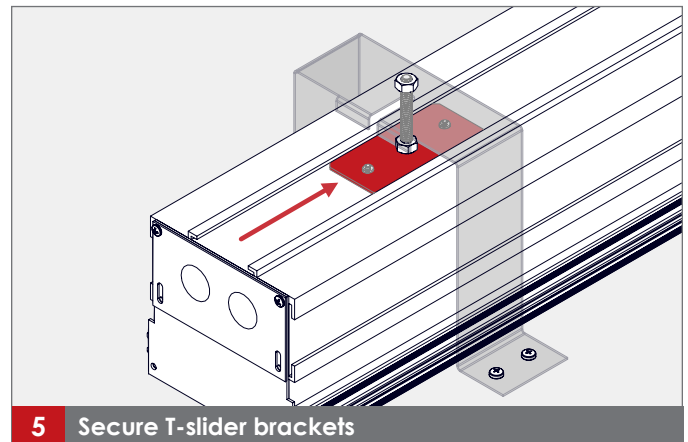

Loosen set screws on slider plate with 1/8" allen key and position into RHF-Mount Bracket. Tighten set screws with allen key.

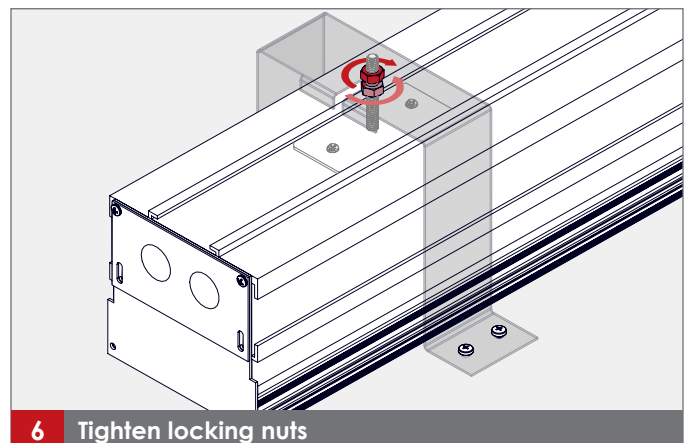

Tighten top and bottom locking nuts until fastened to RHF-Mount Bracket. Raise or lower by adjusting locking nuts until fixture is flush with visible ceiling surface.